

Cantilever tail lift operating instruction





OPENING PLATFORM USING CONTROL CONSOLE


1. Release **Tail Lift Safety Lock** handle.
2. Turn **Power Key** to the right, **Power ON Light** will illuminate green.
3. Turn **Selector Switch “A”** to the right and hold, moving **Joy Stick** downwards
4. To lower platform down, turn **Selector Switch “A”** to the right whilst moving the **Joy Stick** down so the platform will tilt down to rest on ground.
5. To lift platform, turn **Selector Switch “A”** to the right whilst moving **Joy Stick** up. The platform will first rotate to horizontal position then continue horizontally up to floor level.

CLOSING PLATFORM USING CONTROL CONSOLE

1. Lift platform until the lifting arms are rested on the stops located on the body floor.

WARNING: *TILTING THE PLATFORM BEFORE IT REACHES FLOOR LEVEL CAN RESULT IN DAMAGE TO THE MECHANISM*

2. Ensure platform is clear and unloaded.
3. Turn **Selector Switch “A”** to the right and hold, move the **Joy Stick** to the right until platform is completely rested in vertical position against rear door frame.
4. Engage manual **Tail Lift Safe Lock** to secure platform.
5. Remove **Remote Hand Control** and proceed to **Control Console**.
6. Turn **Power Key** to **OFF** position, remove **Power Key** and close **Control Console** access door.

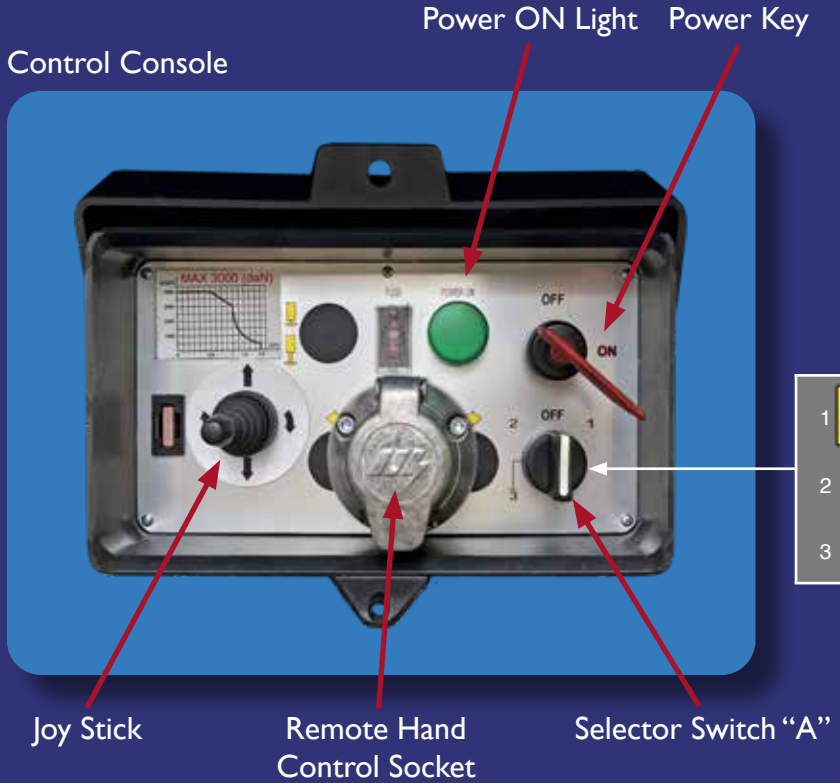

Tail Lift
Safety Lock



Cantilever tail lift operating instruction



REMOTE HAND CONTROL

1. Plug **Remote Hand Control** into **Remote Hand Control Socket**.
2. Turn **Selector Switch “A”** to the remote hand control position (3).
3. Now **Remote Hand Control** is ready for use.

RAISE/LOWER PLATFORM

1. To raise or lower platform select either **Up** or **Down** button to suit the required operation.

LOADING AND MOVEMENT OF PLATFORM

1. Push **Down** button to lower platform to ground and maintain operating button until platform has tilted and end of platform rests on the ground.
2. Place load in the centre of platform using **Load Centre Line** to position your load safely.

WARNING: DO NOT LOAD/UNLOAD ON EDGES OR AT THE END OF PLATFORM. LOAD MUST ALWAYS BE CENTERED TO PREVENT TWISTING OF PLATFORM AND FATIGUE OF MOVING COMPONENTS

3. Push **Up** button, platform will rotate to horizontal position then travel up to required height up to floor level of body.
4. Loading of platform from body the same operation as above and once loaded, push **Down** button to lower platform.

FOOT CONTROL

1. Turn **Selector Switch “A”** to the foot control position (2).
2. **Floor Control** is ready for use.

RAISE/LOWER PLATFORM WITH FOOT CONTROLS


1. Place your foot on the **Power On** button on the platform.
2. Place your other foot on either the **Up** or **Down** button to suit required operation.



anteo

Control Console

Power ON Light Power Key

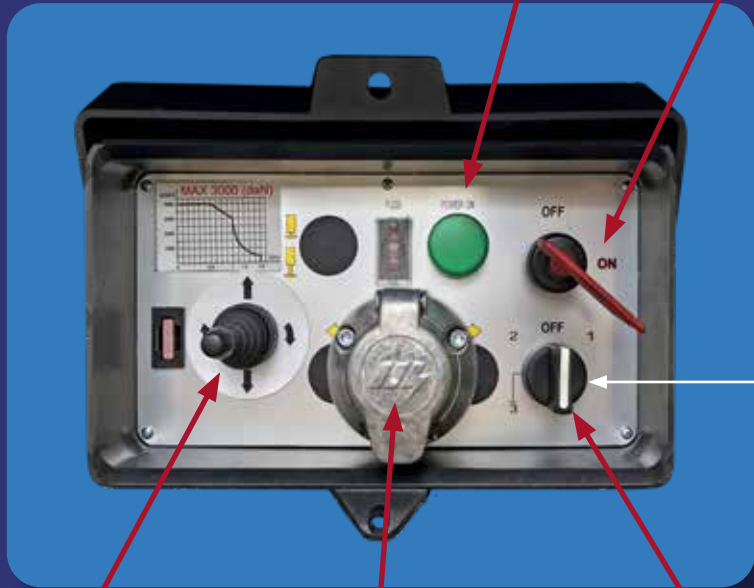



Joy Stick

Remote Hand Control Socket

Selector Switch "A"

Remote Hand Control

Foot Control

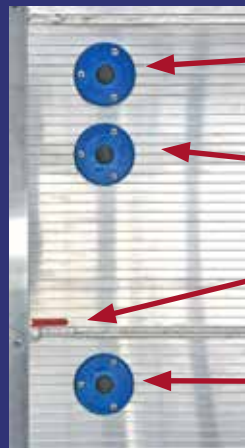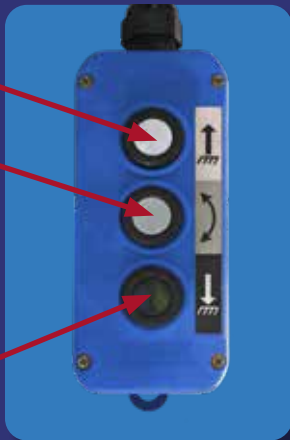

Up

Tilt

To tilt platform, hold and use Up or Down for action

Down

Up

Down

Load Centre Line

Power On

FIXED PRICE ANTEO TAIL-LIFT SERVICING



How does the sound of reliable and improved performance on your tail lift sound?

Our fixed service agreements provide peace of mind and help ensure your equipment is working at optimum efficiency with fewer break-downs from fatigued parts. Regular attention to your tail lift will ensure minimum interruption to everyday operations and less chance of losing a load!

WE CAN SERVICE AND
REPAIR ANY MAKE OR
MODEL OF TAIL LIFT



4-YEAR WARRANTY* IS THE SMARTEST CHOICE FOR YOUR BUSINESS

*This applies only to NSW and SA customers who have bought and had their tail lift installed by TRS NSW OR SA. You must keep your tail lift serviced twice a year to maintain your 4-year warranty.

TRS and Anteo warrants that if any part of the Anteo Tail-lift is found to be defective in factory materials or workmanship within the 4-year warranty period, it will be replaced with genuine Anteo parts or adjusted by an authorised TRS-Anteo technician free of charge.

Please note that warranty is voided if damage is attributable to impact, road traffic accident, or misuse of the tail lift. This warranty does not include TRS Roadside Assistance. For more details, contact TRS.

*The fixed price service charge may change over the 4-year warranty period. Oil & filter are at an additional charge.



GLOBAL TECHNOLOGY LOCAL SERVICE



24/7 Roadside Assistance

TRS has over 25 service vans ready 24 hours, 7 days a week for roadside assistance. So, no matter what time, day or level of emergency, one of TRS's certified Anteo Technicians will get to you and get you going fast. It's all part of TRS's promise to 'Keep you in Top Gear'.



TRS NSW
170 Newton Road (entry via Coates Place),
Wetherill Park NSW 2164
Phone (02) 8822 8180

TRS SA
350 Cormack Road, Wingfield, SA 5013
Phone (08) 8262 2555

trsservice.com.au